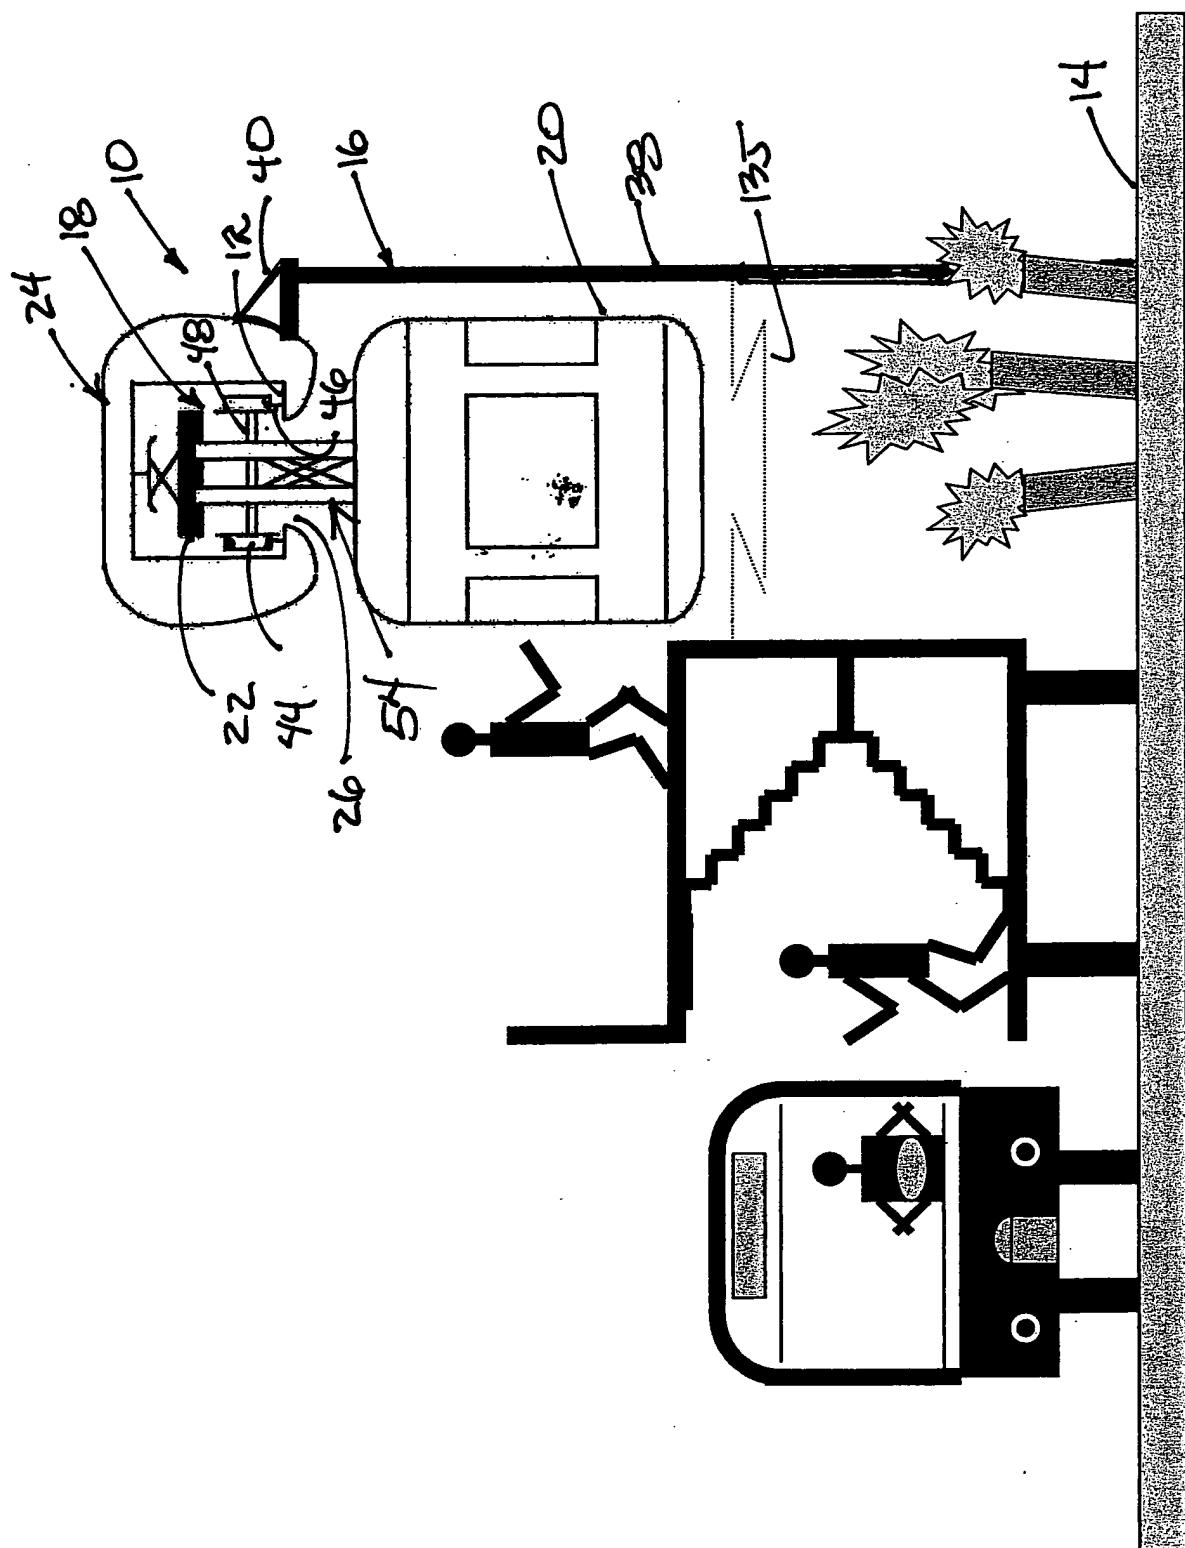


1/16





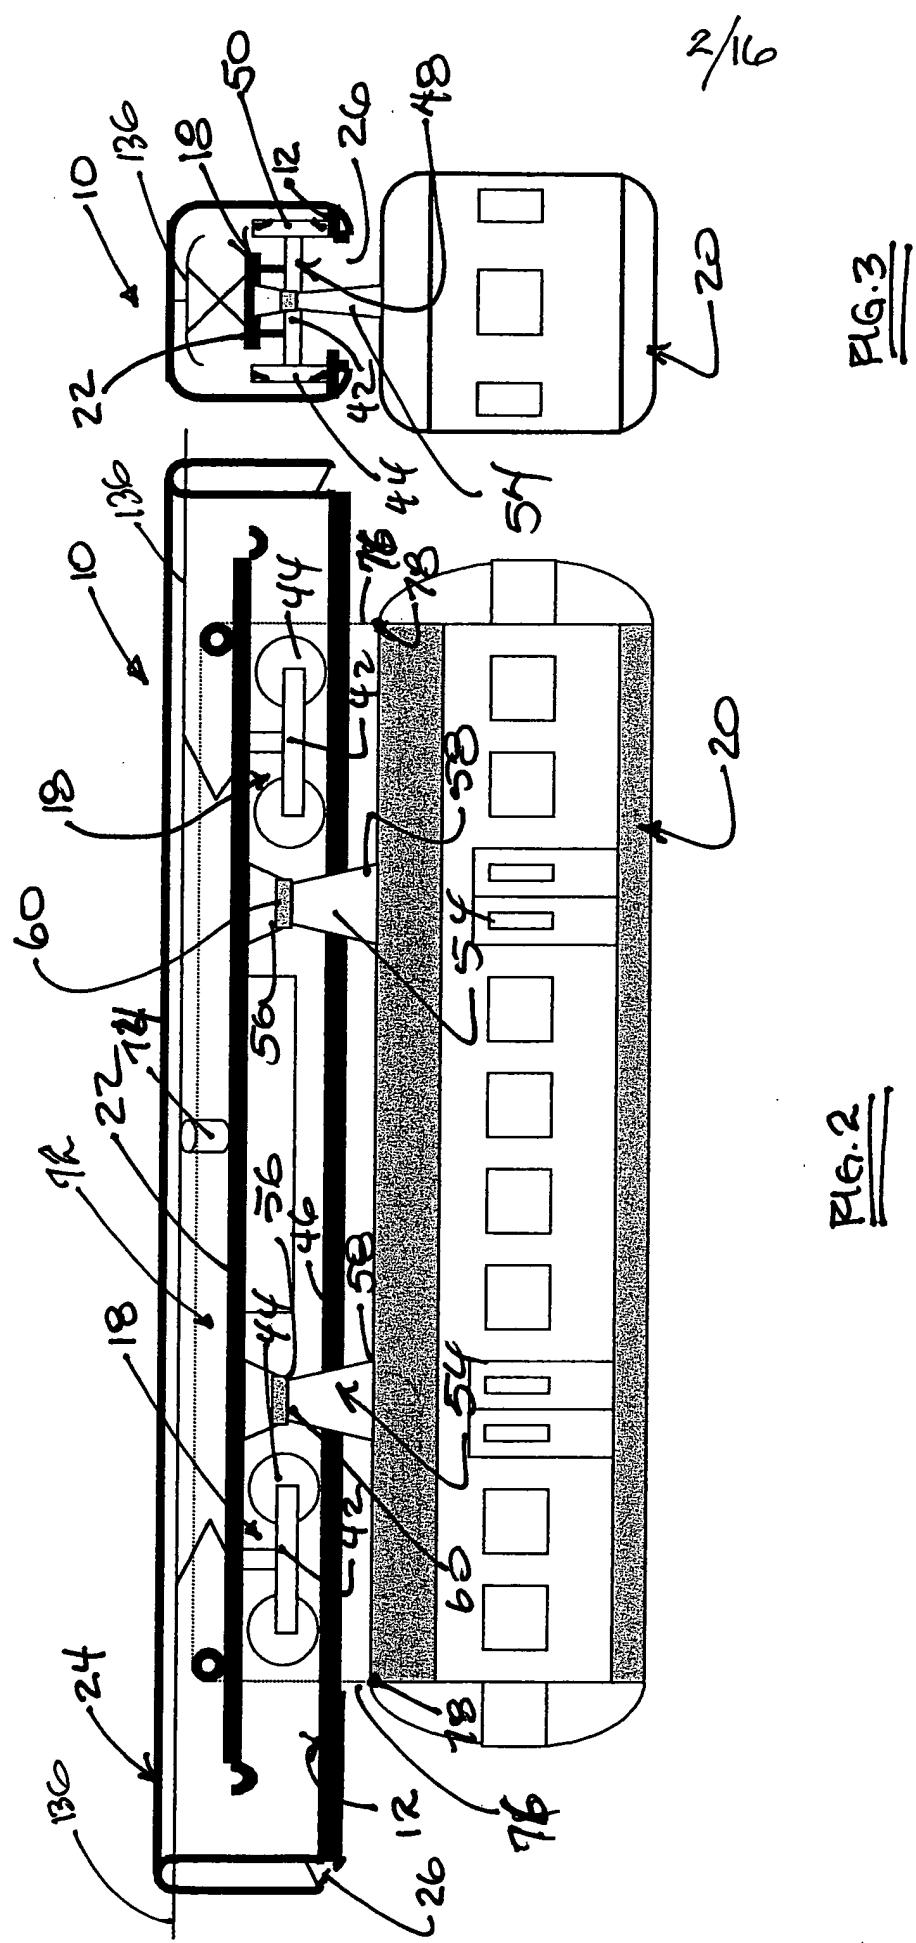




FIG. 2

FIG. 3


2/16

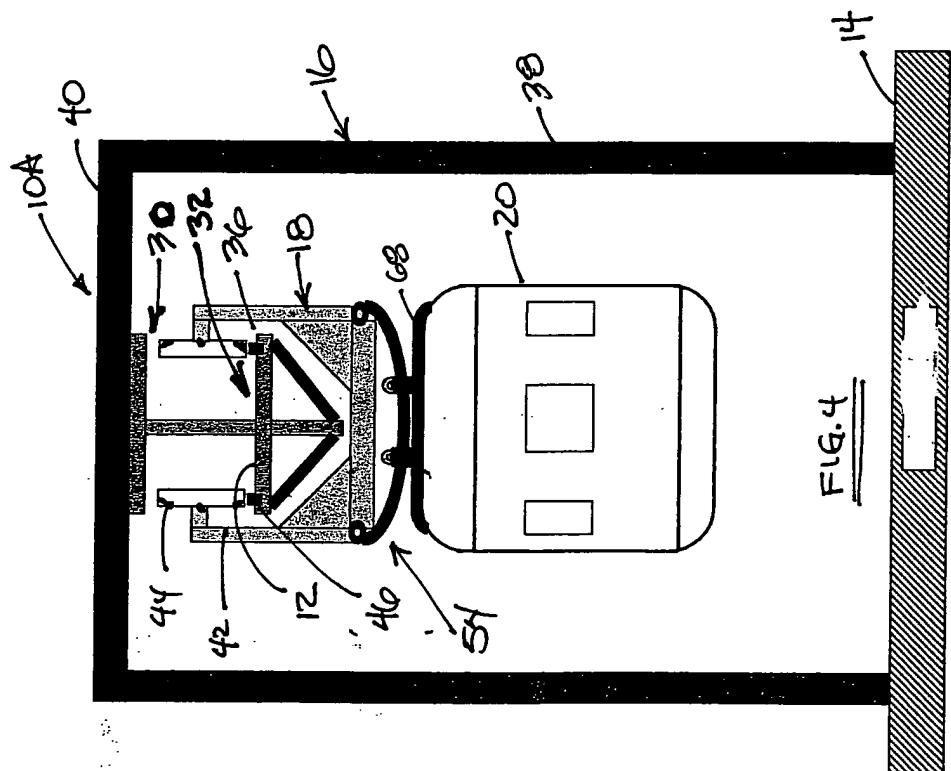
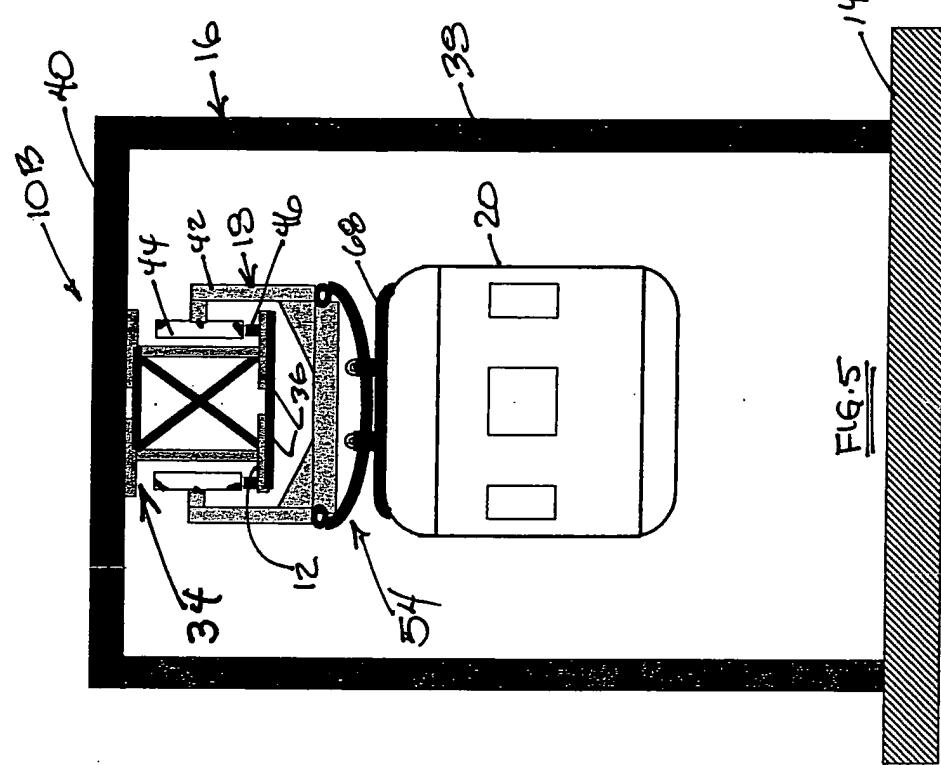




4/16

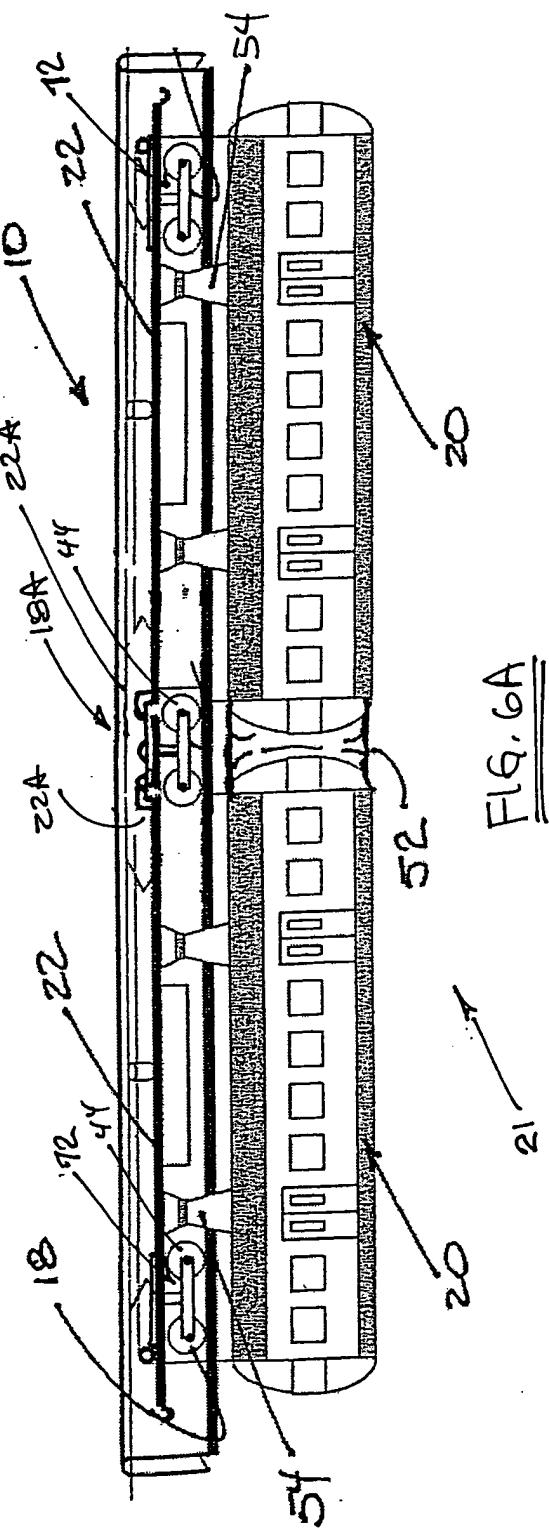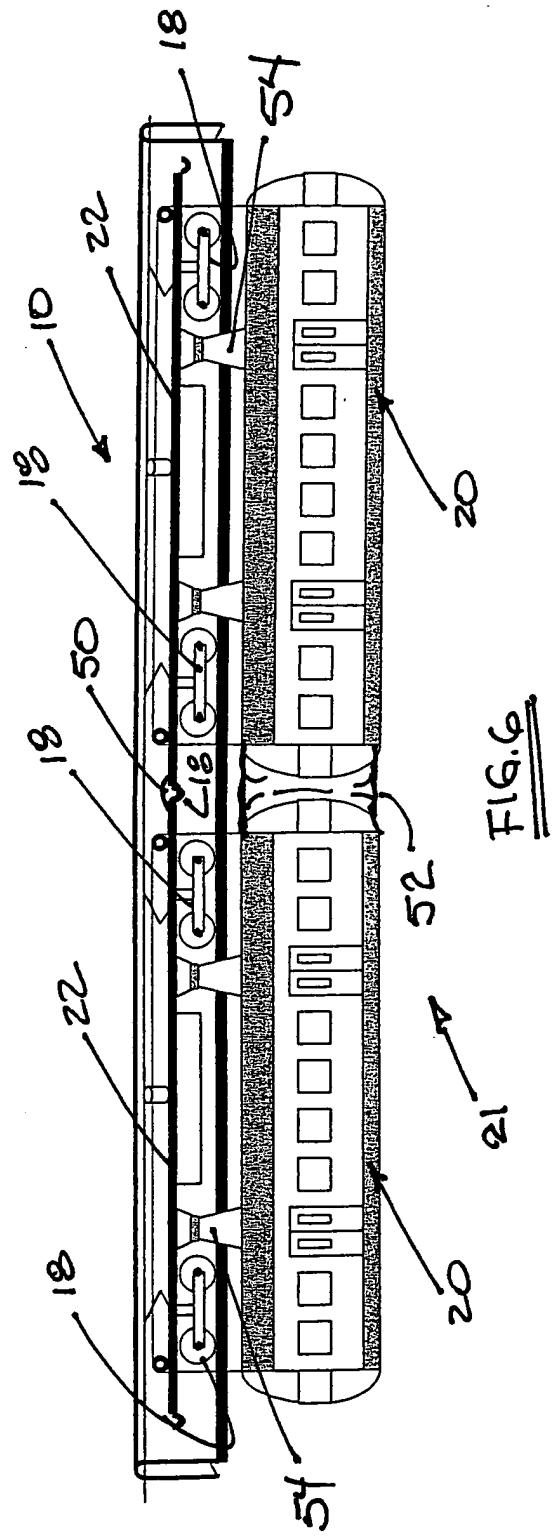



5/16

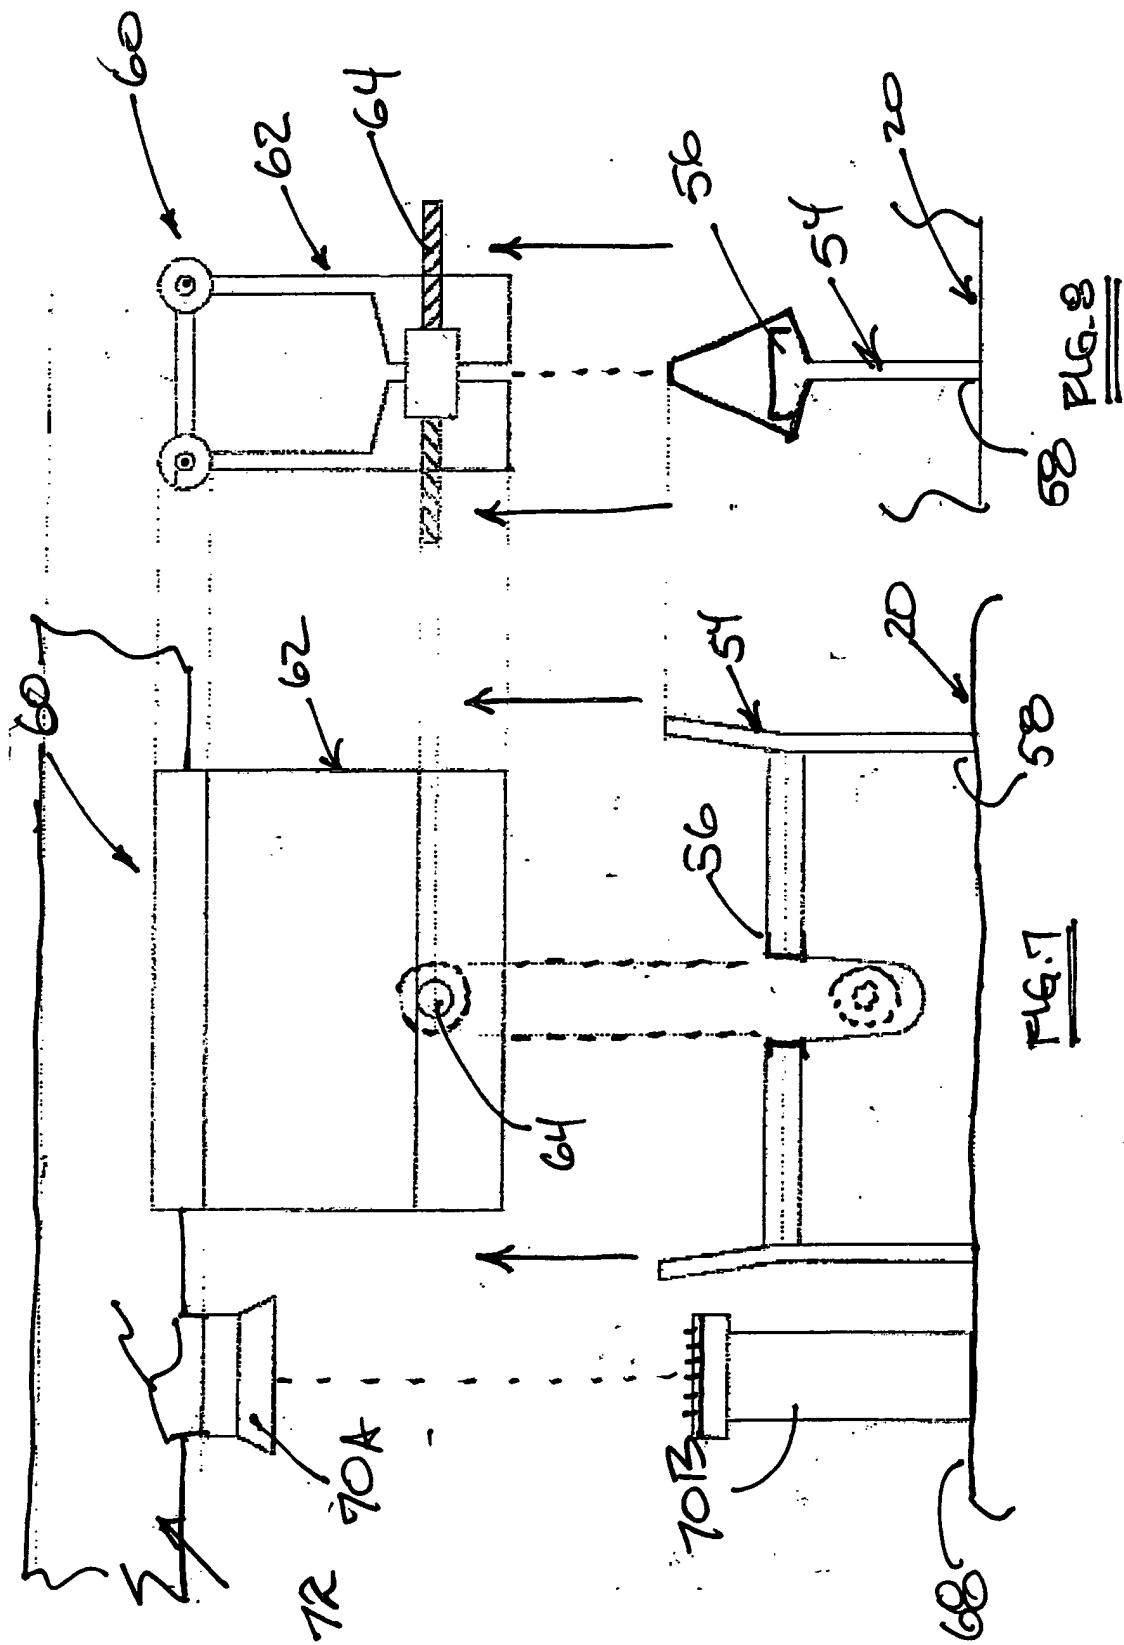

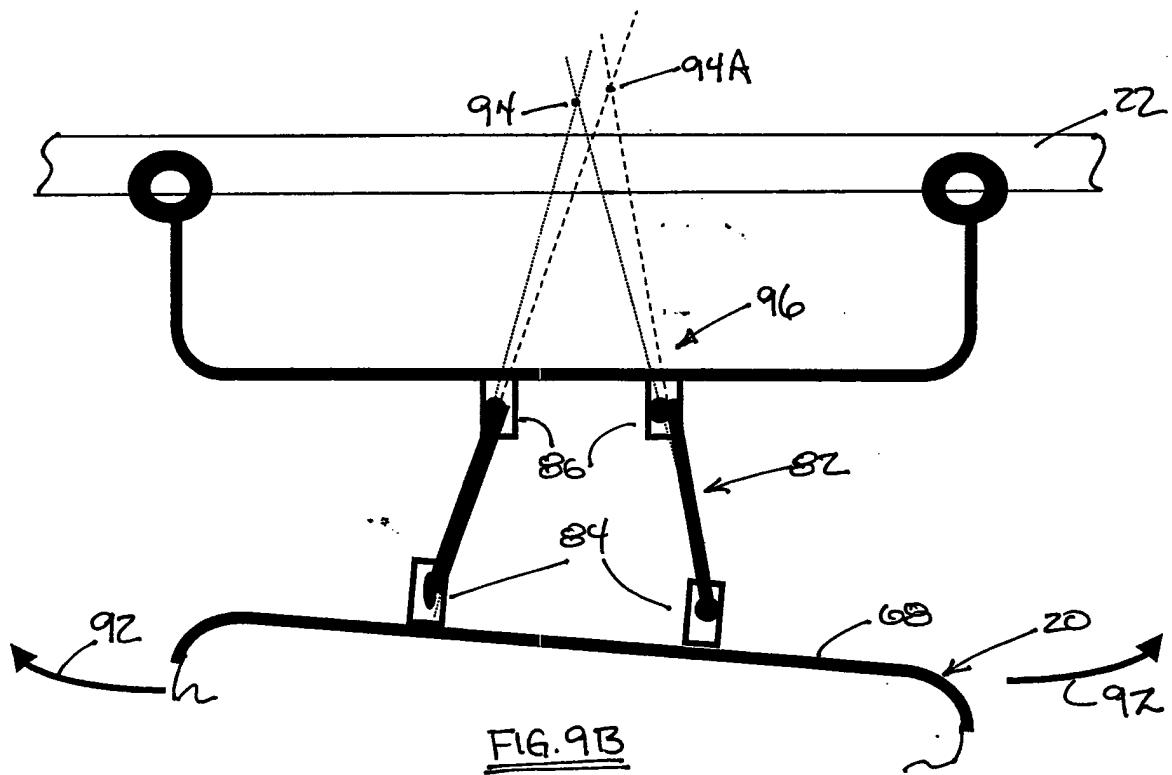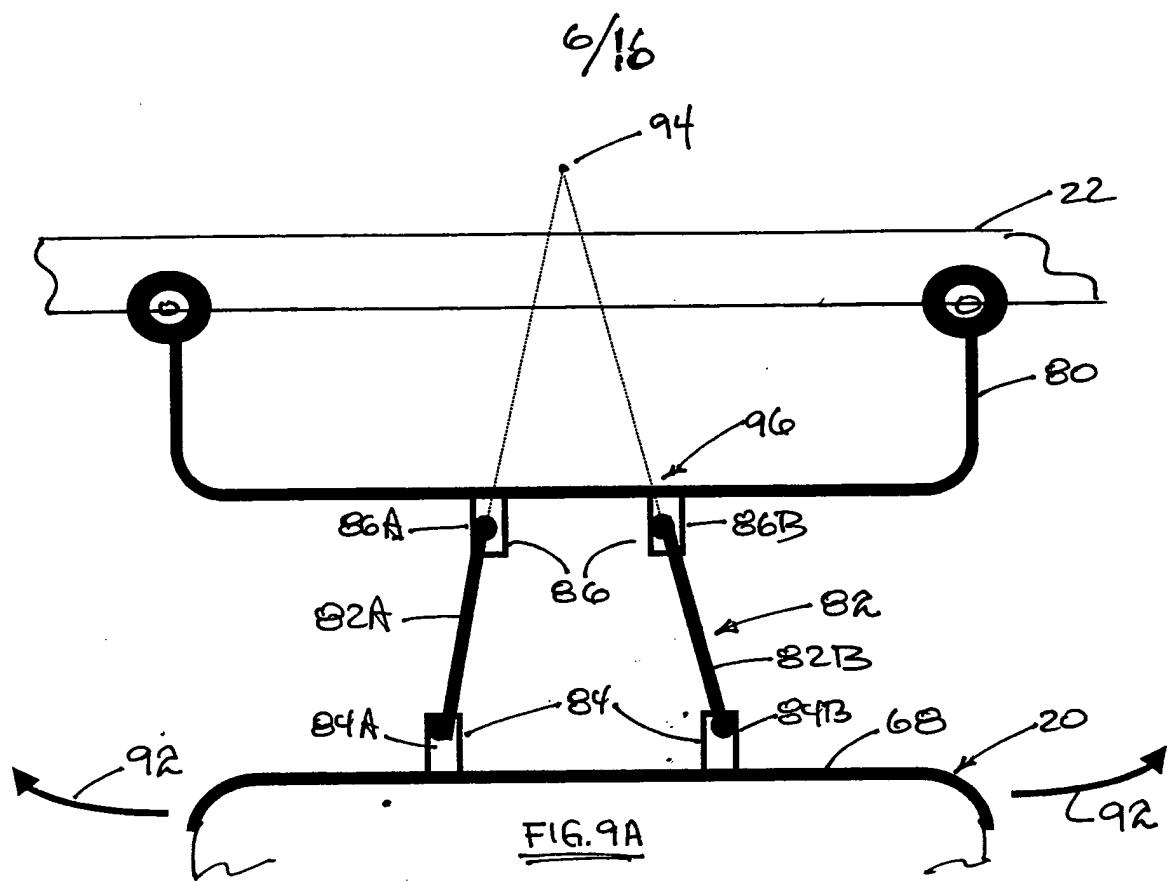

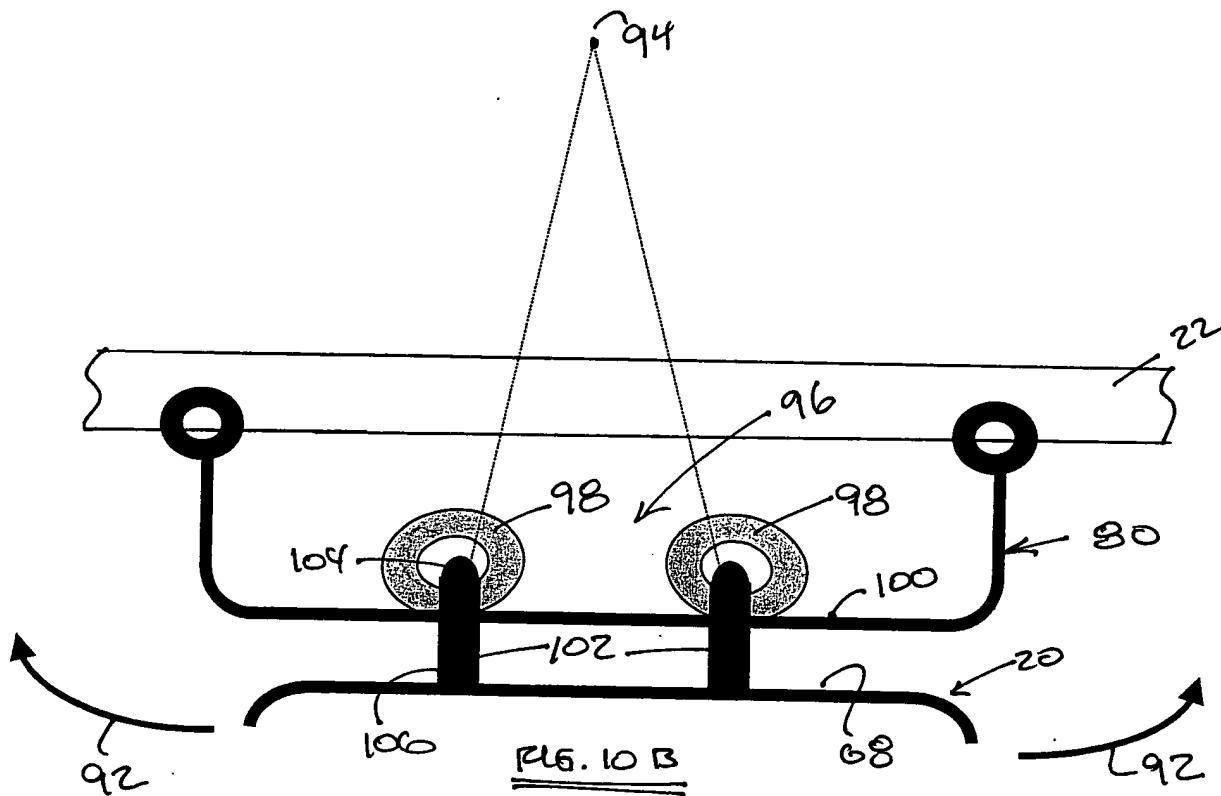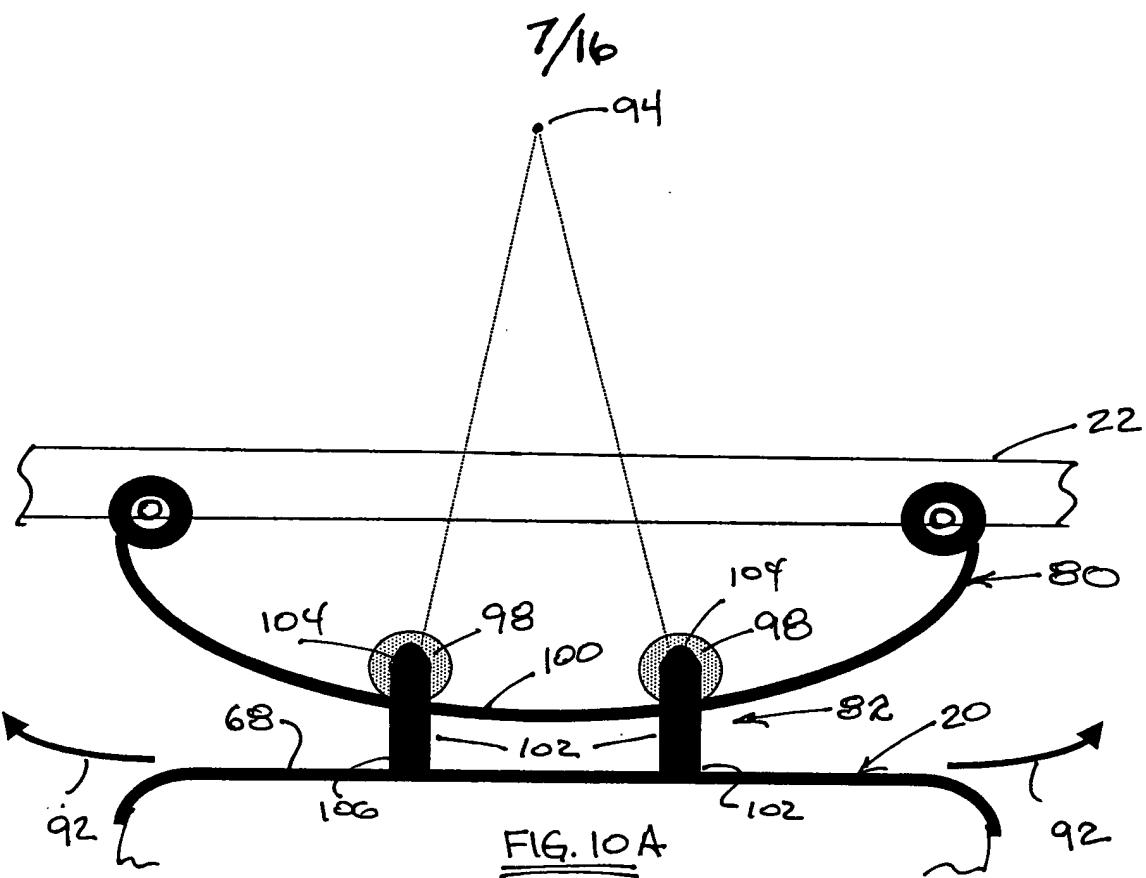

8/16

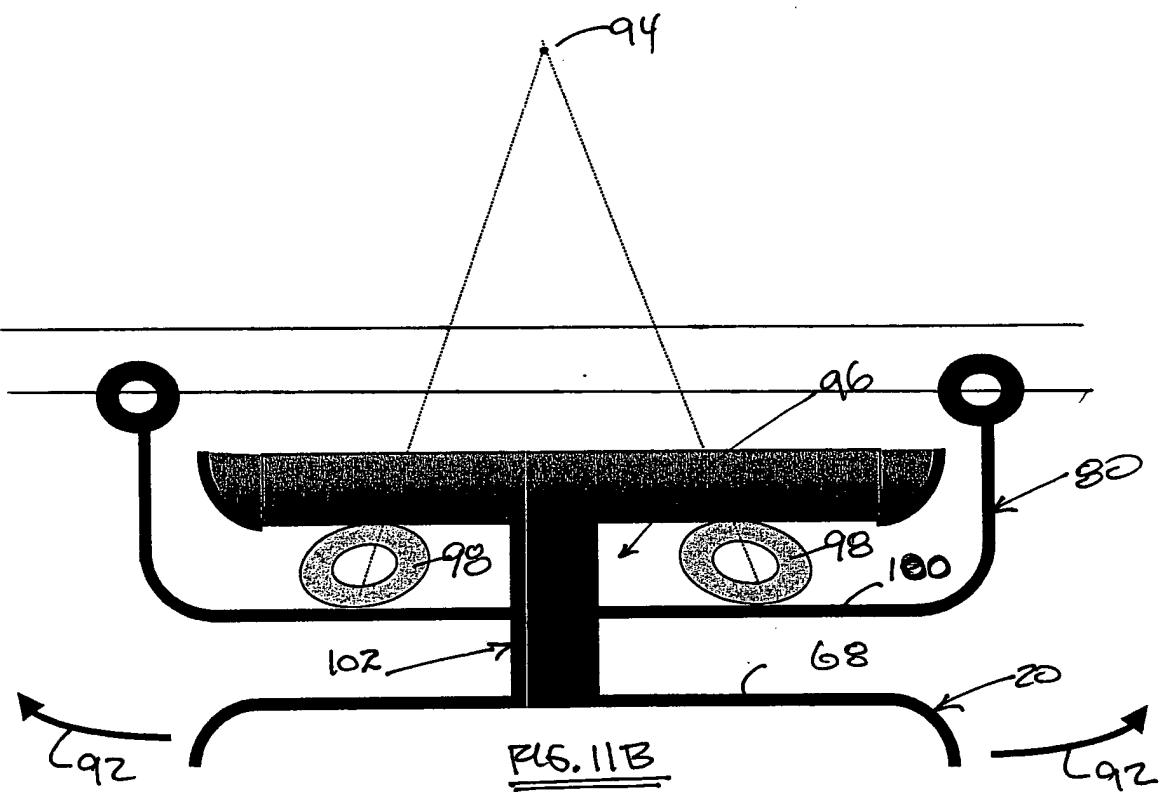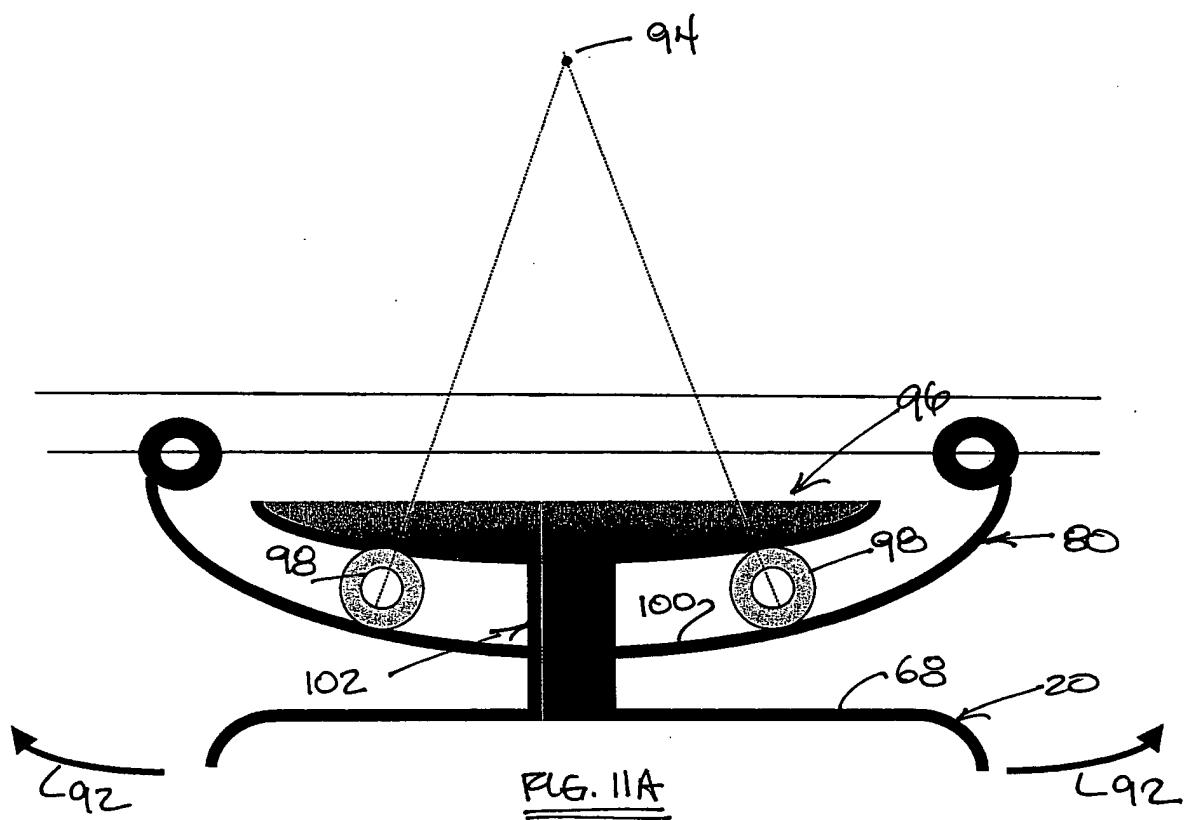

9/16

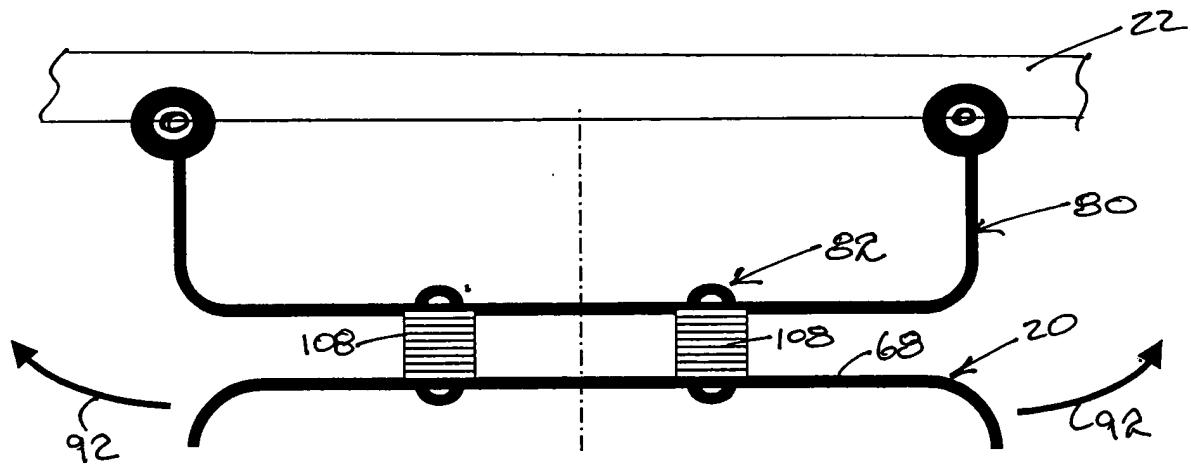


FIG. 12A




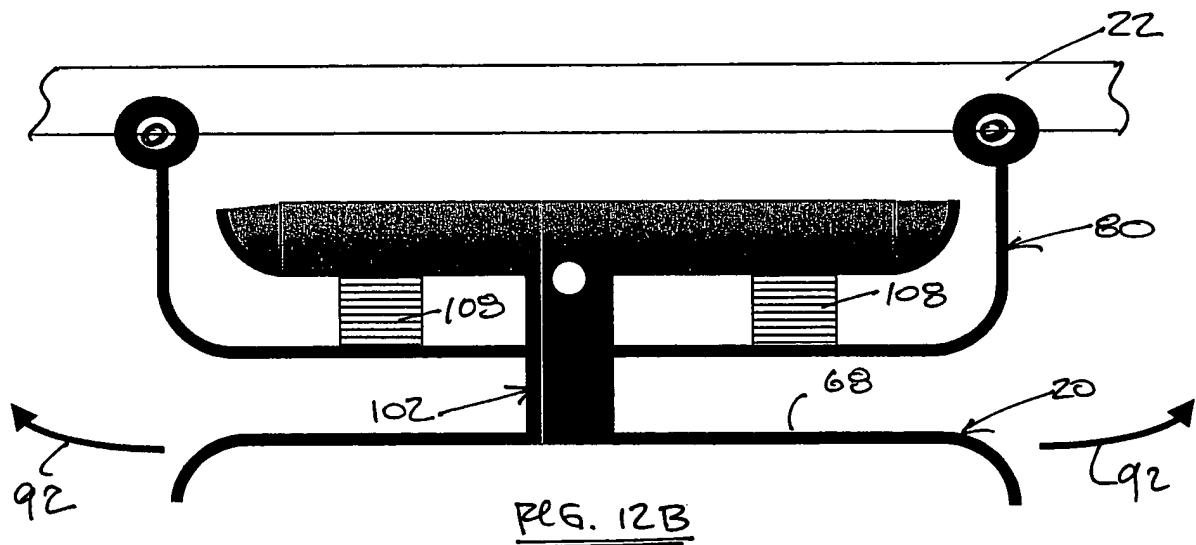


FIG. 12B

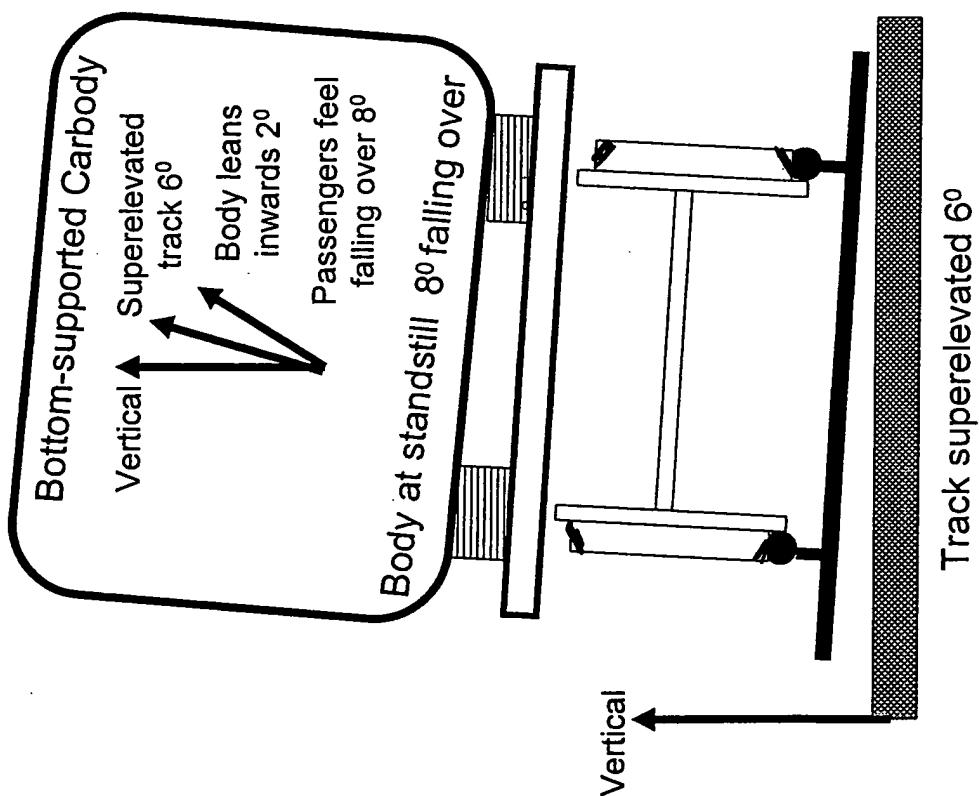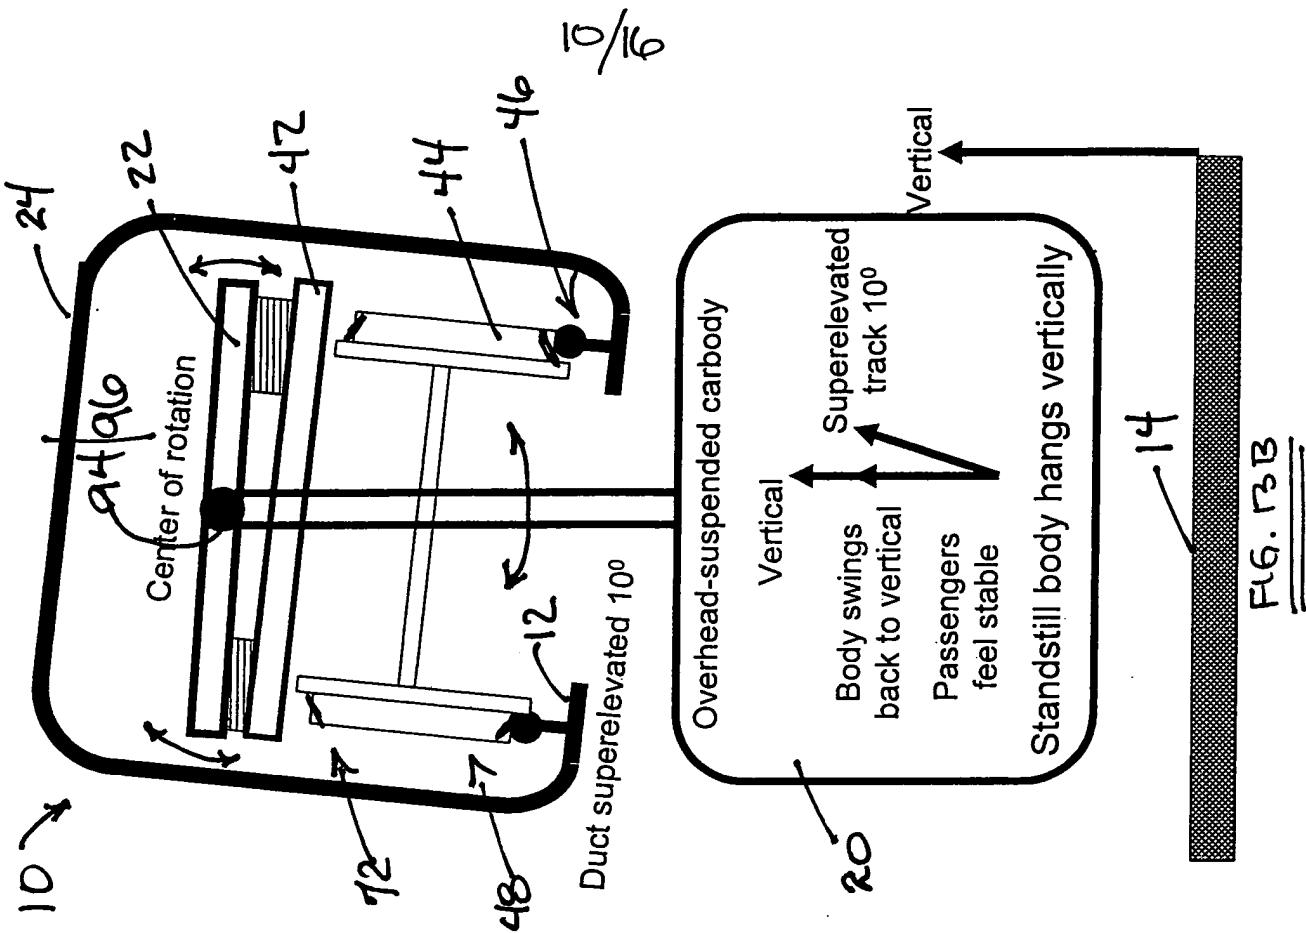

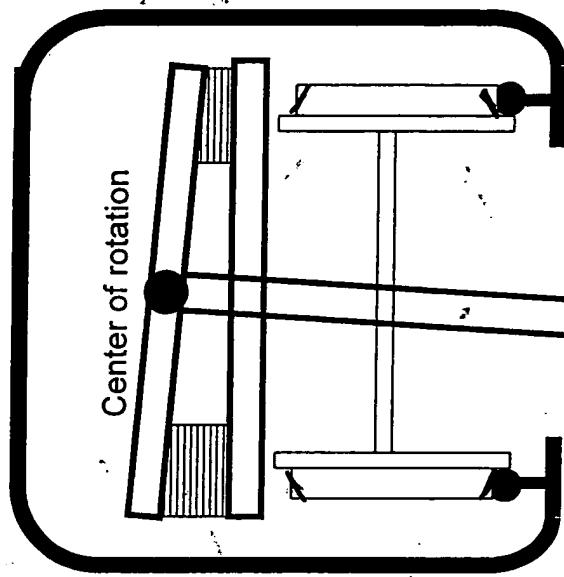

$\equiv \frac{1}{6}$

Flat duct - no superelevation

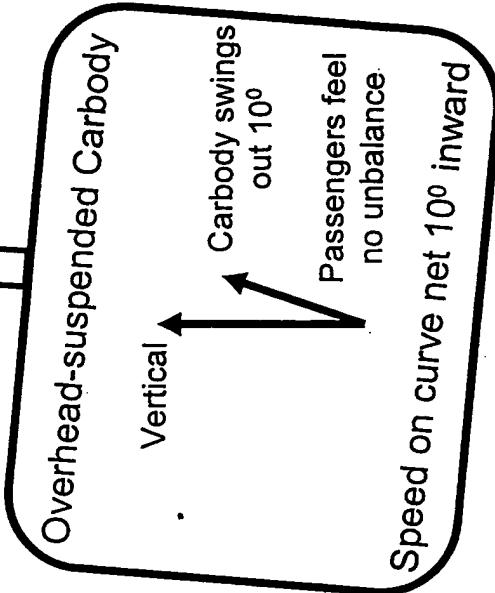


FIG. 14B

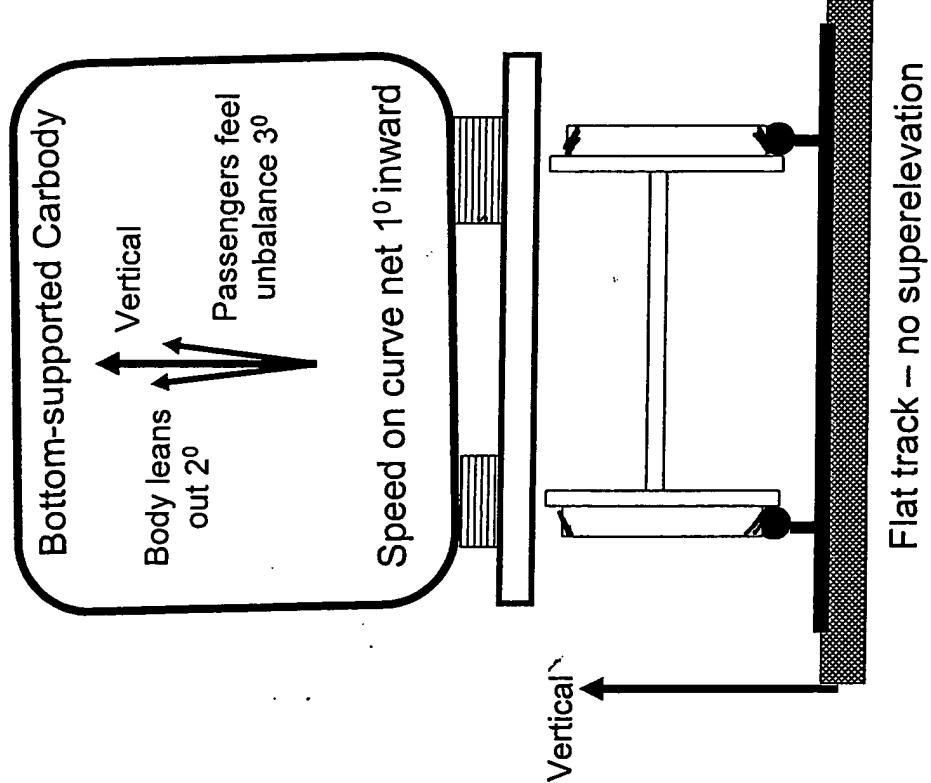


FIG. 14A

Flat track - no superelevation

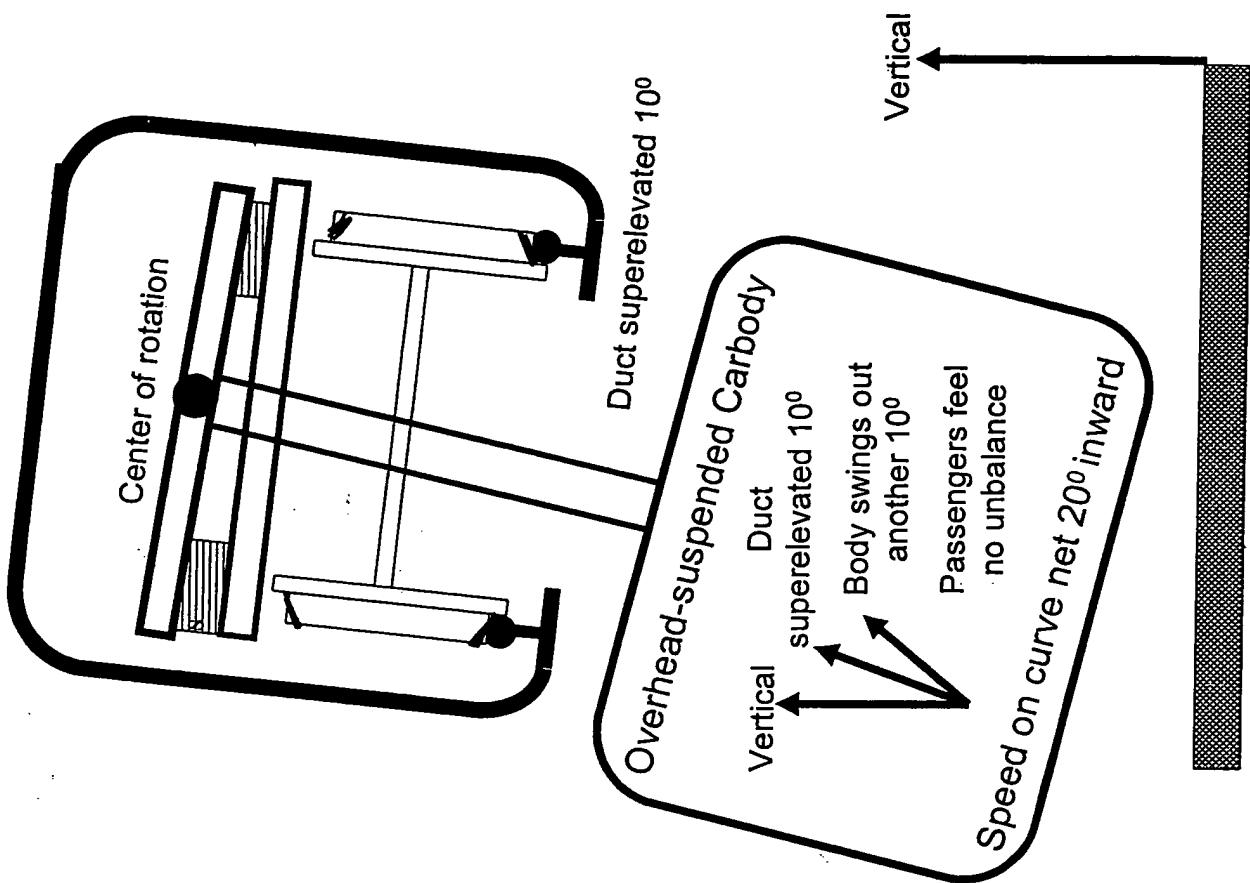


FIG. 15B

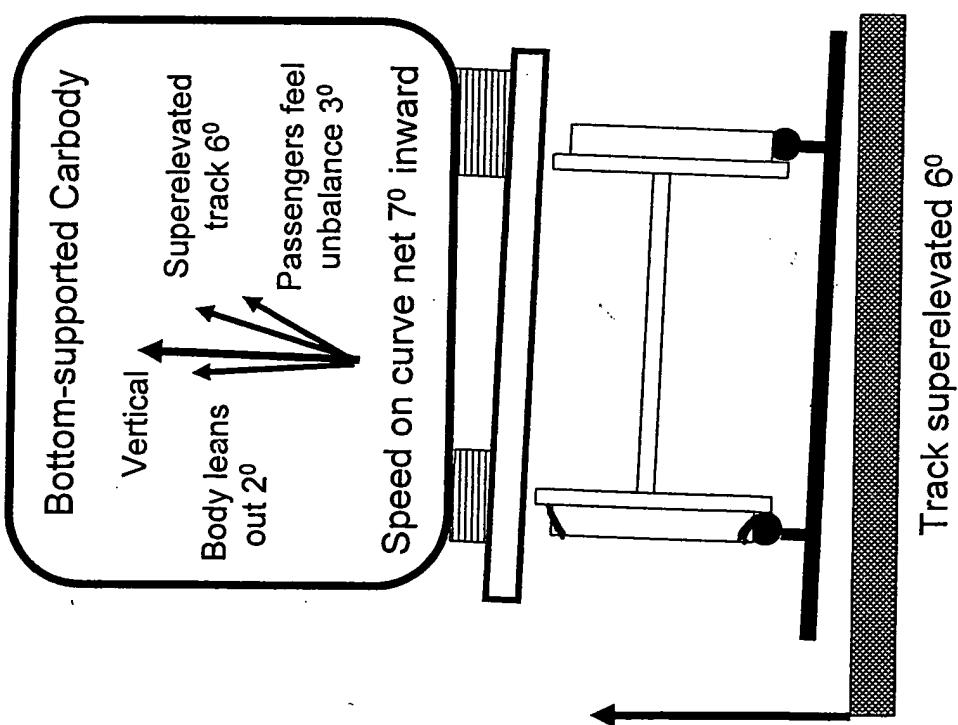


FIG. 15A

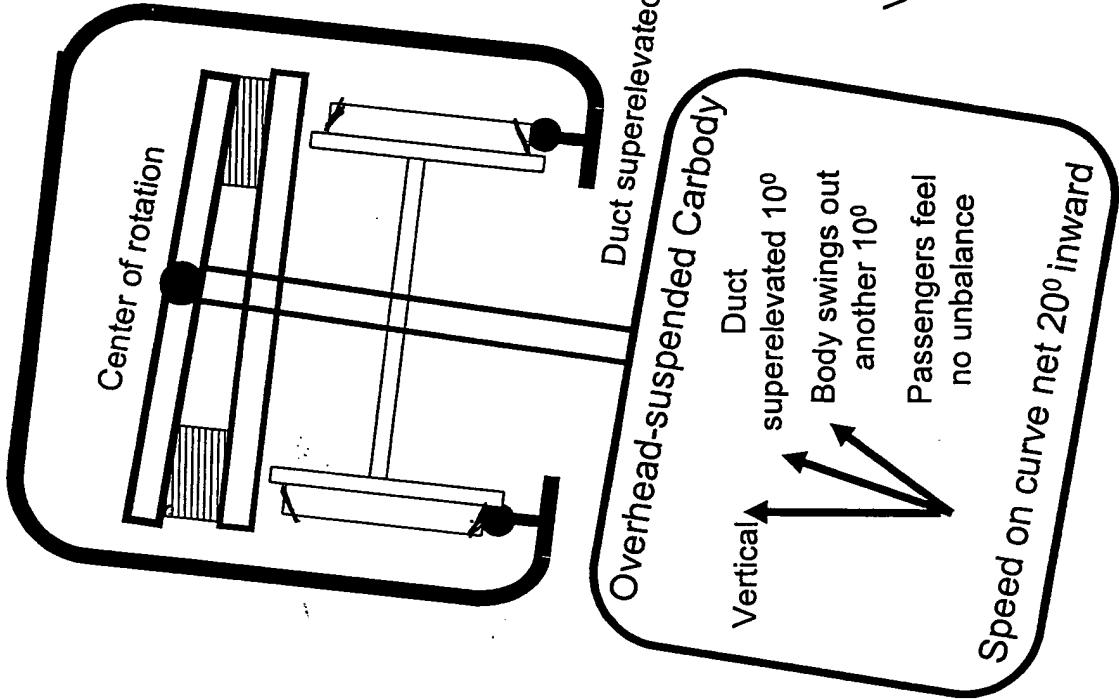


FIG. 16B




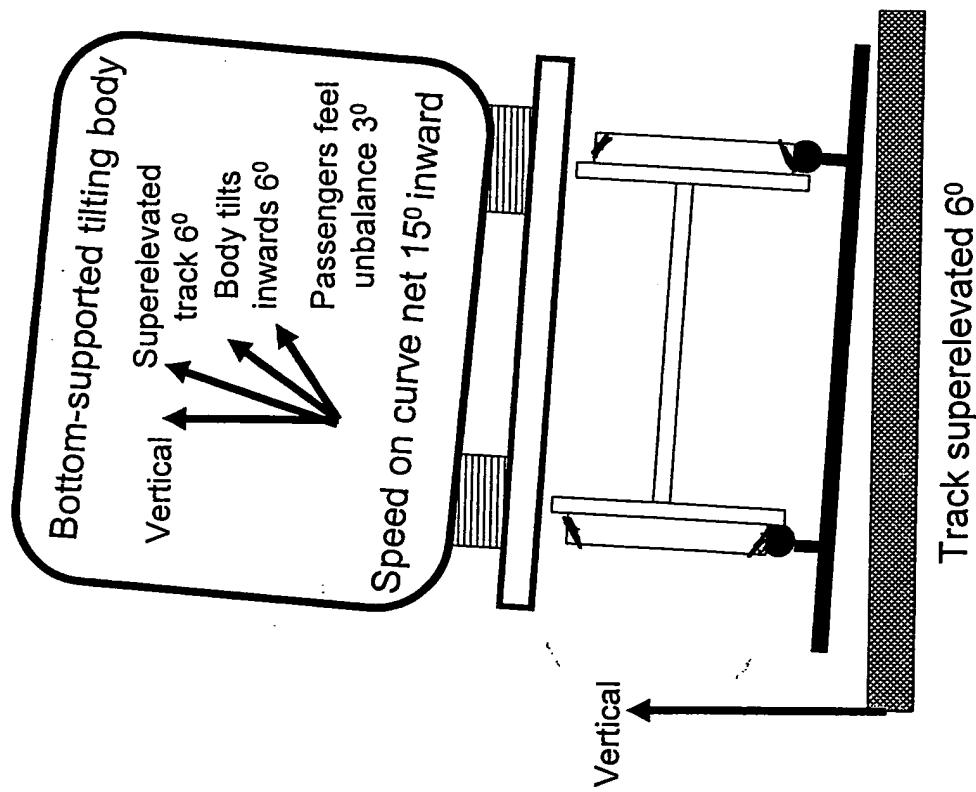


FIG. 16A

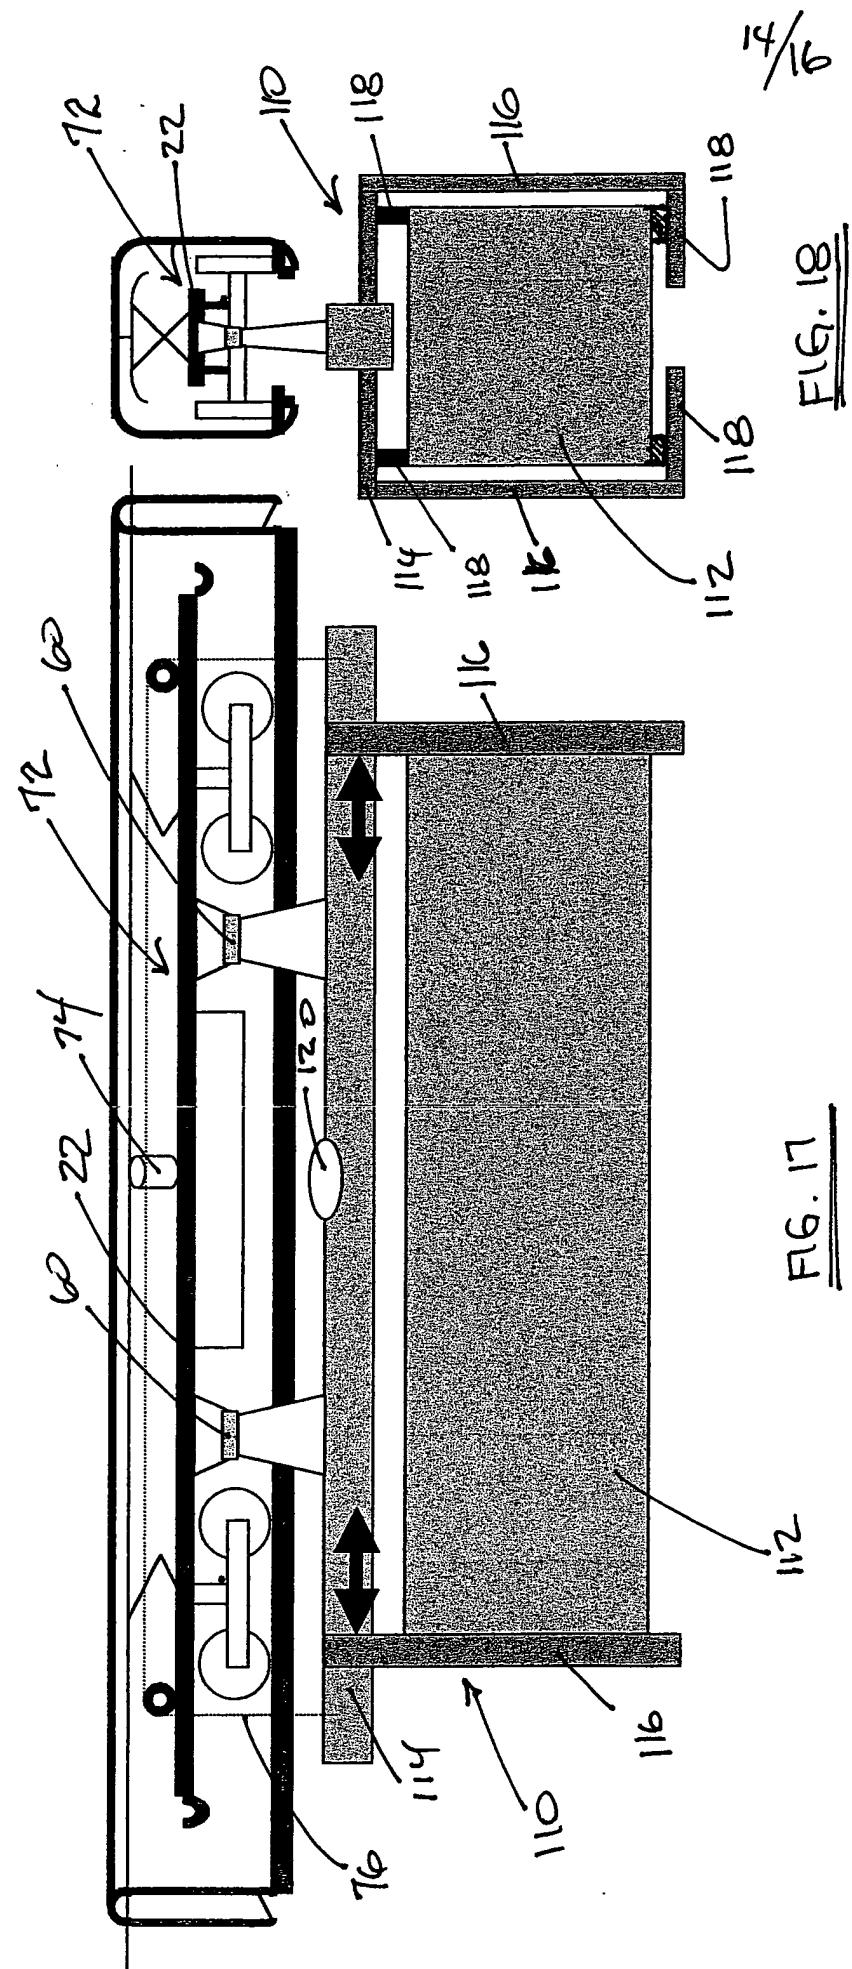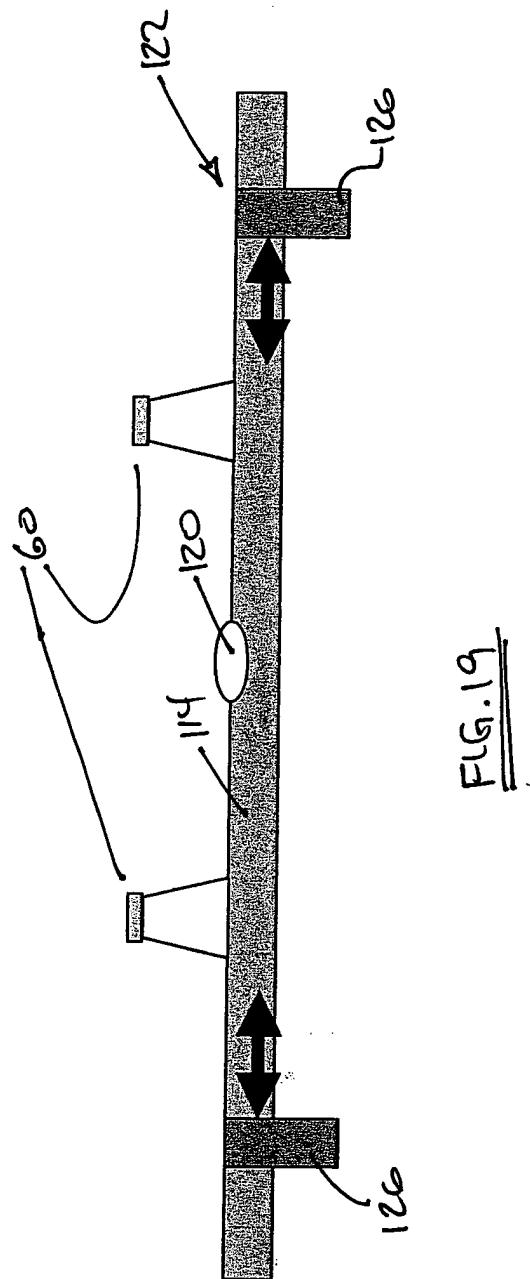

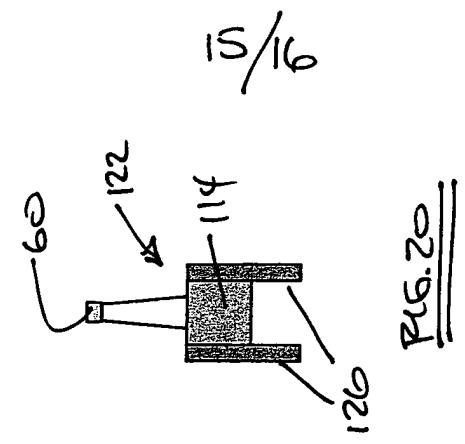

16/16

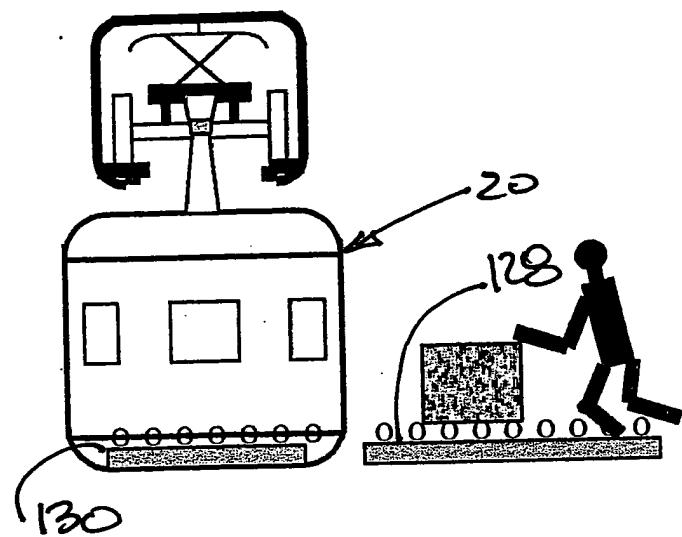


FIG. 21

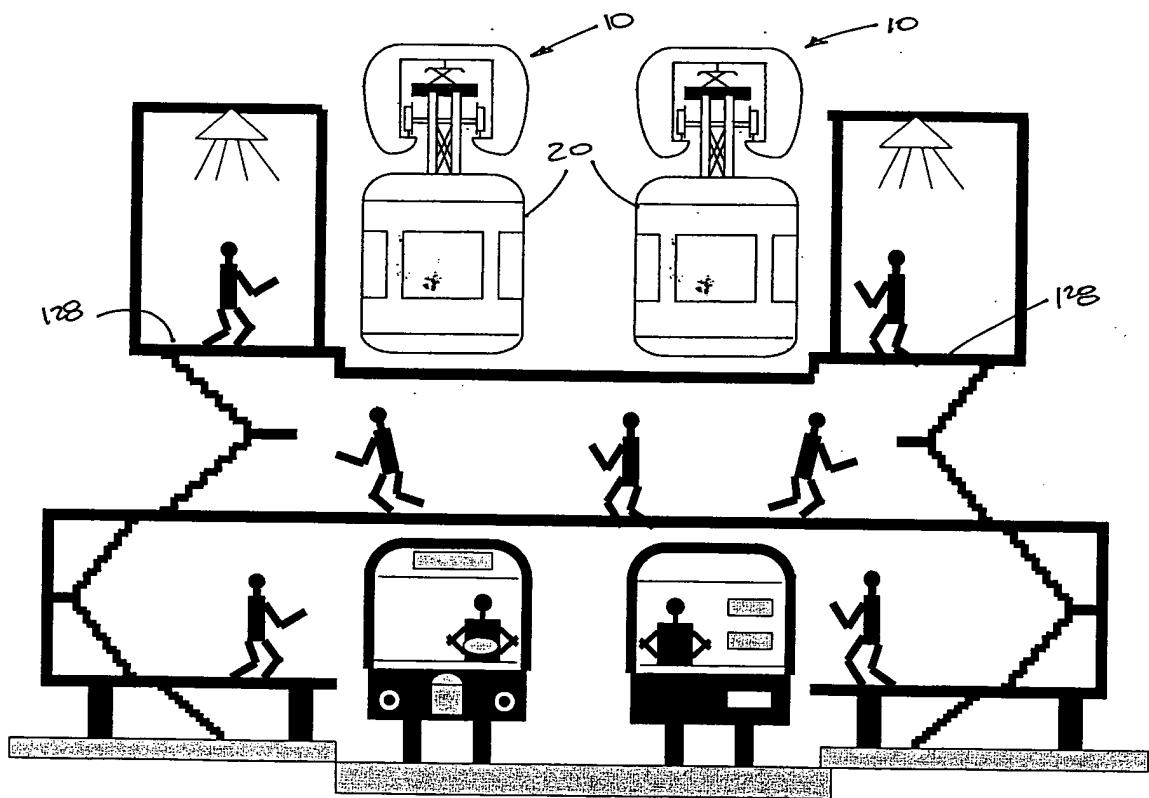


FIG. 22